PAGE I

1. PRODUCT OVERVIEW 03 0 04 () (05)

- 01 Upper belt quide
- © Seat shell
- © Release buttons
- 04 Lower belt guide
- 65 Adjustment lever
- 6 Seat base
- (7) Headrest adjuster (KING II ATS/LS)
- (8) Headrest adjuster (KING II)
- Headrest
- (10) Shoulder pads

- 12 Harness buckle
- (13) Adjusting button
- 14 Indicator light (KING II LS)
- 15 Indicator light (KING II ATS)
- 11 Shoulder straps

- 6 Adjustment strap (17) Adjustment handle
- (18) User guide compartment
- (19) Harness retainer

2. INTRODUCTION

We are delighted that our KING II / ATS / LS can safely accompany your child through a new stage in its life

In order to protect your child correctly, the KING II / ATS / LS must always be used and installed as described in these instructions.

If you have any further questions regarding its use, please feel free to contact us:

BRITAX RÖMER

T.: +49 (0) 731 9345-199 F.: +49 (0) 731 9345-210 E.: service.de@britax.com Blaubeurer Straße 71

D-89077 Ulm www.roemer.eu

BRITAX EXCELSIOR LIMITED

1 Churchill Way West Andover T.: +44 (0) 1264 333343 : +44 (0) 1264 334146 Hampshire SP10 3UW E.: service.uk@britax.com

These instructions use the following symbols stated below:


Symbol	Keyword	Explanation		
\triangle	DANGER!	R! Risk of severe personal injury		
\triangle	WARNING!	Risk of minor personal injury		
\triangle	CAUTION!	Risk of material damage		
<u>(i)</u>	TIP:	Useful notes		

Instructions that follow a set sequence are numbered Example

1. Press the button.

Belt guide colours

For better differentiation, the two vehicle seat belts are highlighted in different colours. The diagonal seat belt 21 in dark red and the lap belt 22 in bright red. The colour of the belt guides on the child safety seat follows the same colour scheme

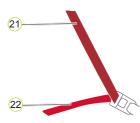

3 CERTIFICATION / USAGE

0. 0211111 107111011 7 007102					
BRITAX RÖMER Child safety seat	Testing and certification In accordance with ECE* R 44/04 *ECE = European Standard for Child Safety Equipment				
	Group	Body weight			
KING II / ATS / LS	I	9 to 18 kg			

The child safety seat has been designed, tested and certified according to the requirements of the European Standard for Child Safety Equipment (ECE R 44/04). The seal of approval E (in a circle) and the approval number are located on the orange approval label (sticker on the child safety seat).

⚠ DANGER! This approval will be invalidated if you make any modifications to the child safety seat. Only the manufacturer is permitted to make modifications to the child safety seat.

▲ DANGER! Never secure your child or the child safety seat with a 2-point belt. If you secure your child in the child seat with only a 2-point belt, then in the event of an accident this may cause serious injuries to


your child, possibly resulting in death. Please observe the instructions for using children's restraining systems in the operating instructions of your vehicle. The seat can only be used in vehicles with 3-point retractor safety-

Please find the information on the seats approved for child safety seats of the weight classes 9 to

18 kg in the operating instructions of your vehicle.

You can use your child safety seat as follows:

- 1		
	In the direction of travel	yes
	Against the direction of travel	no ¹⁾
	with 2-point belt	no
	with 3-point reractor safety belt ²⁾	yes
	on front passenger seat	yes ³⁾
	on outer rear seat	yes
	on centre rear seat (with 3-point belt ²⁾)	yes 4)

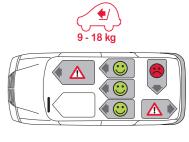

- 1) Use is permitted on a rearward-facing vehicle seat (e.g. in a van or minibus) only if the vehicle seat is also approved for use by adults. The seat may not be in the area of effect
- 2) The seat is only compatible with 3-point retractor type safety-belts, approved to ECE Reg No. 16 or other equivalent standards.

 3) If there is a front airbag: Slide the vehicle seat a long way back and refer to any instructions
- 4) Cannot be used if the vehicle seat is equipped with only a 2-point belt.

4. CARE AND MAINTENANCE

Care for the harness buckle

It is vital for the safety of your child that the harness buckle works correctly. Malfunctions of the harness buckle are usually caused by accumulations of dirt or foreign bodies. Malfunctions include the following:

 
- The buckle latches are ejected only slowly when the red release button is pressed.
- The buckle latches will no longer lock home (i.e. they are ejected again if you try to push
- The buckle latches engage without an audible "click".
- The buckle latches are difficult to insert (you feel resistance).
- The buckle only opens if extreme force is applied.

Remedy: wash out the harness buckle so that it functions properly once again.



Cleaning the harness buckle

- 1. Open the harness buckle (12) (press the red button).
- 2. Adjust the seat shell 02 to the upright seating position.
- Open the Velcro fastener on the crotch pad 25 and remove it and retain it.
- which keeps the buckle (12) at the seat base and turn it into a vertical position.
- Soak the harness buckle (12) in warm water with dishwashing liquid for at least an hour.
- Rinse and dry the harness buckle (12) thoroughly.
- △ DANGER! Pull the harness buckle (12) firmly to ensure that it is securely fastened.
- 10. Insert the crotch pad 25 through the slot 27 and secure the Velcro fastener



- Grasp below the seating area the metal plate 26
- Slide the metal plate 26 through the slot 27.
- Slide the metal plate 26 edgewise through the slot
- Rotate the metal plate 26 90°

Cleaning the occupant sensor

- 1. Fold the lower part of the cover updwards.
- 2. Remove dirt and dust in the area of the occupant sensor 28 with a vacuum cleaner
- DANGER! The occupant sensor 28 must not come in contact with water

Please ensure that you only use the original BRITAX RÖMER replacement seat covers, as the seat cover is an integral part of the child safety seat and fulfils important functions to ensure the smooth operation of the system. Replacement seat covers are available from your dealer or from an ADAC office.

- The cover can be removed and washed using the delicates programme of the washing machine (30°C). Please observe the instructions on the washing label of the cover
- The plastic parts can be cleaned with a damp cloth. Do not use any caustic cleaning agents (such as solvents).
- ▲ DANGER! The child seat must not be used without the seat cover.

Removing the cover

Loosen the harness straps as far as possible.

1. Open the harness buckle (12) (press red button).

2. Remove the cover of the headrest 09

- 3. Open the poppers 29 on the left and right side of the rear part of the cover.
 - 4. Unhook the elastic seam of the cover under the edge of the seat shell
 - i TIP: Start at the sides of the seat shell.
 - 5. Pull the cover up and over the bezel of the strap adjuster. 6. Feed out the harness buckle (12) and the end of the strap
 - 7. Pull the cover upwards and remove it over the headrest

The cover can now be washed. Please observe the instructions on the washing label of the cover



from the cover.







5. DISASSEMBLY AND DISPOSAL

UNFASTENING YOUR CHILD:

1. To unfasten your child, press the red release button of the 5-Point harness buckle (12).

REMOVAL:

- 1. Unbuckle the vehicle belt buckle 20 and loosen the harness straps.
- 2. Unhook the diagonal belt section (21) from the upper belt guide (01).
- 3. To open the shell: push one of the grey release buttons 03 and at the same time pull the seat shell 02 as far forward as possible.
- 4. Remove the diagonal (21) and the lap belt sections (22) from the light red lower belt guides (04)
- 5. Hold the seat shell 02 with one hand while pulling the grey adjustment lever 05 forward with the other hand.
- 6. To close the shell: tip the seat shell 02 against the seat base 06 over both engagement positions.
- MARNING! To avoid injuries take your hand away from the grey adjust-
- ment lever 05, as soon as getting over the two engagement positions. 7. Push the seat shell 02 with both hands against the seat base 06 until it is fully engaged.

DISPOSAL:

Please observe the waste disposal regulations in your country...

Container for cardboard boxes
Residual waste, thermal utilisation
According to the labelling in the corresponding container
Container for metals
Container for polyester
Residual waste
Container for batteries

9 to 18 kg (~9 M to 4 Y)









PAGE II

6. SAFETY NOTES

lack lack Please take the time to read these instructions carefully and keep them to hand in the intended storage compartment (18) on the child safety seat at all times! The instructions must be with the child safety seat if the latter is passed on to a third party.

△ DANGER! For the protection of your child:

- Use the KING II / ATS / LS exclusively for securing your child in your vehicle. It is in no way suitable as a seat or toy in the home.
- In the event of an accident with a collision speed of more than 10 km/h, the child safety seat may be damaged without the damage becoming immediately visible. In this case the child safety seat must be replaced. Please dispose of it properly.
- · Have your child safety seat checked as a rule if it was damaged (e.g if it falls to the ground).
- Regularly check all important parts for damage. Ensure that all mechanical parts, in particular, are fully functional.
- Never lubricate or oil parts of the child seat.
- Never leave your child unattended in the child seat in the vehicle.
- · Let your child in and out of the vehicle from the pavement side as a rule.
- Protect the child safety seat against intensive direct sun radiation, as long as it is not in use. The child safety seat can become very hot under direct sun radiation. Child skin is sensitive and could thereby be injured.
- The more snugly the harness fits over your child's body, the better your child will
- be protected. Therefore avoid putting thick clothes on your child under the belt. Take regular breaks on long journeys in order to give your child the opportunity to play around when removed from the child seat.
- Use on the rear seat: Push the front seat forwards sufficiently so that the feet of your child cannot hit the backrest of the front seat (to avoid the risk of injury).

⚠ DANGER! For the protection of all vehicle occupants:

In the case of an emergency stop or an accident, unsecured persons or objects may cause injury to other vehicle occupants. Please always check

- the backrests of the vehicle seats are locked (i.e. that a foldable rear seat bench latch is engaged).
- all heavy or sharp-edged objects in the vehicle (e.g. on the parcel shelf) are secured
- all persons in the vehicle have their seatbelts fastened.
- the child safety seat is always secured when it is in the vehicle, even if no child is being transported.

MARNING! For your protection when handling the child seat:

 
- Never use the child safety seat free-standing, not even for test sitting. When opening or closing, nothing must come between the seat shell 02
- and the seat base 06. You or your child could pinch your fingers, injuring
- To avoid damage, ensure that the child safety seat is not jammed in between hard objects (car door, seat rails, etc.).
- Keep the child safety seat in a safe place if it is not in use. Do not place any heavy objects on the seat and do not store it directly next to sources of heat or in direct sunlight.

⚠ CAUTION! To protect your vehicle:

· Certain car seat covers made from more sensitive materials (e.g. velour, leather, etc.) may sustain signs of wear and tear when using child safety seats. For the optimum protection of your car seat covers, we recommend using the BRITAX RÖMER Car Seat Protector from our accessories programme.

7. ANGLE ADJUSTMENT

The seat shell of the KING II / ATS / LS can be put into four different angles:



To adjust the angle:

 
Lift the adjustment handle (17) and pull/push the seat shell 02 into the desired position.

 
- ANGER! The seat shell 02 must engage securely regardless of its position. Pull on the seat shell
- 02) to ensure that it is engaged properly.
- TIP! You can also adjust the angle of the seat shell (02) when your child is sitting in the child seat.

8. INSTALLATION OF THE CHILD SEAT




- 1. Place the child seat facing in the direction of travel on the vehicle seat.
- 2. Push one of the grey release buttons 03 and at the same time pull the seat shell 02 as much forward as possible
- **DANGER!** When opening or closing, nothing must come between the seat shell 02 and the seat base 06. You or your child could pinch your fingers, injuring them.





 - 4. Engage the buckle tongue in the vehicle seat buckle 20 with an audible "CLICK".
- **5.** Tighten the diagonal belt section (21) by pulling the diagonal belt 21 strongly on the opposite side from the vehicle seat belt buckle
- **6.** Hold the seat shell 02 with one hand while pulling the grey adjustment lever 05 forward with the other hand. Tip the seat shell (02) against the seat base 06 over both engagement positions.





7. Push the seat shell 02 with both hands against the seat base 06 until it is fully engaged.

DANGER! The two red safety markings on the grev release buttons must not be visible.



- 8. Place the diagonal belt section 21 in the upper dark red belt quide 01.
- 9. Give the child seat a firm pull forwards to ensure that it is securely fastened.
- 10. Observe the steps in the chapter 10.1 "ADJUSTING THE HEADREST"
- 11. Observe the steps in the chapter 10.2 "BUCKLE UP YOUR CHILD"



Tor the safety of your child, before every journey in the car check that ...

- the child safety seat is securely fastened.
- > seat shell 02 and seat base 06 are fully engaged. The both red safety marks on the grey release buttons (03) must not be visible.
- the diagonal 21 and the lap seat belt sections 22 run on both sides through the light red lower belt guides 04,
- the diagonal seat belt section 21 runs through the upper dark red belt guide 01)
- diagonal (21) and lap seat belt sections (22) are tight and **not** twisted.
- the vehicle seatbelt buckle 20 is **not** positioned between the lower light red belt guides 04 of the child seat
- ▶ the headrest is adjusted correctly.
- ▶ the 5-point harness of your child seat are comfortable but FIRM fit around your child,
- the straps of the 5-point harness are **not** twisted.

- ▶ the buckle tongues 23 are engaged in the harness buckle 12
- **DANGER!** If your child tries to open the vehicle belt buckle 20, or the 5-point harness buckle (12) stop immediately as soon as safely possible. Check whether the child safety seat is correctly fastened and ensure that your child is correctly secured. Explain to your child the dangers associated with their actions.

UNFASTENING YOUR CHILD AND REMOVAL:

To unfasten your child or to remove the child safety seat, observe the steps in Section 5 "DISASEMBLY AND DISPOSAL" [PAGE I]

9. 1 ADJUSTING THE HEADREST

A correctly set headrest 09 ensures that the 5-Point harness is optimally positioned, and gives your child optimum protection.



The headrest (09) must be adjusted so that there is a space two fingers wide between the headrest (09) and your childs shoulders.

To adjust the height of the headrest to fit your child:

7/

1 Loosening the harness

Press the adjustment button (13) and at the same time pull below the shoulder pads (10) both shoulder straps (11) forward.

2. Adjusting the headrest for:

KING II ATS / LS

- 1. Have your child sit down in the seat and check the height
- 2. Pull / push the headrest adjuster 07 into the desired direction.
- 3. Repeat the procedure until the headrest 09 has the correct height

KING II



 
- 1. Pull the leaver of the headrest adjuster 08 at the rear of the seat shell 02 Now the headrest is unlocked.
- 2. Slide the unlocked headrest adjuster 09 into the desired diection to the correct height. As soon as you release the leaver of the headrest adjuster 08 , the headrest 09 engages.
- 3. Have your child sit down in the seat and check the height. Repeat the procedure until the headrest (09) has the correct height.

9.2 BUCKLE UP YOUR CHILD

The more snugly the harness fits over your child's body, the better your child will be protected. Therefore avoid putting thick clothes on your child under the belt.



- 1. Open the harness buckle (12) (press red button) 2. Press the adjusting button 13 and at the same time pull below the shoulder pads (11) both shoulder straps 10 forward.
- . Insert the buckle tongues 23 into the harness retainer
- 4. Have your child sit down in the child seat.
- 5. Check the correct height of the headrest and adjust them if necessary [see above].
- 6. Make sure that your child's back lies flat against the backrest of the child seat.
- 7. Unhook the buckle tongues 23
- 8. Guide the two buckle latches 23 together and engage



them before putting them into the harness buckle(12) - this should make a clicking noise. Pull shoulder straps (11) to remove all slack from the lap section ensuring the harness lies flat

- **DANGER!** The lap belts 24 must be positioned as low as possible over your child's hips.
- 10. Carry out the steps in section "9.3 SECURING YOUR CHILD" for your particular product variant

9.3 SECURING YOUR CHILD

Product variant KING II:

 


- MARNING! Pull out the adjusting strap (16) straight forward
- 1. Pull on the adjusting strap (16) until the harness lies flat and is close against your child's body.
- 2. Observe the safety notes in the chapter **"8. INSTALLATION OF THE CHILD SEAT"**

Product variant KING II LS:



MARNING! Pull the adjuster strap (16) straight forward (not upwards or downwards).



- TIP! The green indicator light turns off automatically after a few seconds.
- 2. Observe the safety notes in the chapter
- ***8. INSTALLATION OF THE CHILD SEAT***

What to do when the indicator light does not illuminate "green" ... • Check if the headrest is adjusted correctly according to the chapter "9.1 ADJUSTING THE HEADREST"

• Ensure that you have pulled the adjuster strap with enough force.

In general the battery in the product is a non replaceable item and must not be changed due to its long life

If the problem can not be resolved using the above methods, contact your service representative or the BRITAX RÖMER Customer Service.

Product variant KING II ATS:

Your child seat has a system that automatically keeps the tension in the belt once adjusted correctly. The system works with an occupant sensor, so without your child sitting in the seat the indicator light will be off.



- MARNING! Pull the adjuster strap (16) straight forward (not upwards or downwards)
- 1. Pull the adjuster strap (16) until the indicator light (15) illuminates "green" and you can hear an audible



► The belt tensioning of your child seat is now active and removes excess belt length automatically. TIP! The green indicator light 15 turns off automatically after a few seconds, but the system continues to work.



⚠ DANGER! When the indicator light (15) flashes red and an alert sounds, your child is not properly secured. Stop at the next safe opportunity and repeat the steps of the chapter 9.3 Securing your child.



1 TIP! If you are driving and you can't stop immediately the frequency of the alert will significantly reduce automatically after 3 mins (reminder mode). When not driving you can put the alert into reminder mode by pressing the indicator light (15) for 3 seconds.



DANGER! When the indicator light (15) flashes red and green the batteries must be replaced.



Unfold the seat cover and the foam cushion on the seating surface and change the two type AAA batteries in the battery compartment 24

↑ DANGER!

- The batteries must be replaced by an adult.
- Keep batteries out of the reach of children.
- Use only new batteries of the same type. • Use only 2x AAA type, 1.5 volts batteries.
- Never use batteries that show signs of leakage.
- Remove the old batteries and dispose of them according to the disposal instructions on page I, chapter 5.
- Do not expose the batteries to excessive heat or fire, the batteries may burst or explode
- Due to lower voltage do not use rechargeable batteries.
- Observe the warning on the packaging of your batteries.

What to do when the indcator light does not illuminate at all... • Check if the headrest is adjusted correctly according to the chapter "9.1 ADJUSTING THE HEADREST".

• Check if there is any accumulation of dirt on the seating area under the occupant sensor.

If necessary clean the area as described in chapter 4 [page I].

- Replace both batteries
- Ensure that you have pulled the adjuster strap with enough force.
- If the problem can not be resolved using the above methods, contact your service representative or the BRITAX RÖMER customer service.