

IMPORTANT

Keep these instructions for future reference. Your child's safety may be affected if you do not follow these instructions.

Instruction Leaflet

Push Me Fusion



Stroller: This vehicle is intended for children from birth up to a maximum weight of 15kgs. Complies with BS EN 1888 : 2012 Group O Rear Facing Infant Carrier: For infants up to 10kg (Group O). Conforms to ECE R44.O4 Universal. Customer Care Line: 01454 326 568

Parts list

1Frame and basket × 1 2 Bumper bar × 1 3 Rear wheels × 2 4 Front wheels × 2 5 A×le unit × 1 6 Stroller hood × 1 7 Stroller apron × 1 8 Car seat including head hugger and harness pads 9 Combined seat/cot unit including harness pads × 1 10 Raincover × 1(not shown)



Assembly instructions

To open and unfold the frame

Slide the primary lock button to the side, squeeze the secondary lock trigger (Fig.1) and lift the handle upwards until the frame locks in place (Fig.2)

WARNING Ensure that all the locking devices are engaged before use.

To attach the rear wheels

Push the axle unit onto the back legs (Fig.3) ensuring the spring buttons have popped through the holes (Fig.4).



Slide the spindle of the rear wheels into the axle unit (Fig.5) and push inwards until they lock in place (Fig.6). The wheels can easily be removed by pressing the button (Fig.7) and pulling the wheel out.

To use the brakes

To use the brakes, push the lever down to engage them and lift up to release (Fig.8).


WARNING Apply all the brakes whenever you park the stroller.

To attach and operate the front wheels Slide the stems on the front wheels into the wheel holders and push up (Fig.9). To select fixed or swivel wheels, push the button on the top (Fig.1O). To remove the front wheels, push the wheel release button on the side and pull the wheel down.

To adjust and secure the harness Slide the waist harness (A) in to the shoulder strap (B) and then push in to the central buckle housing (C). To release the buckles simply push the button in the centre of the buckle housing.

WARNING Always use the crotch strap in combination with the waist belt.



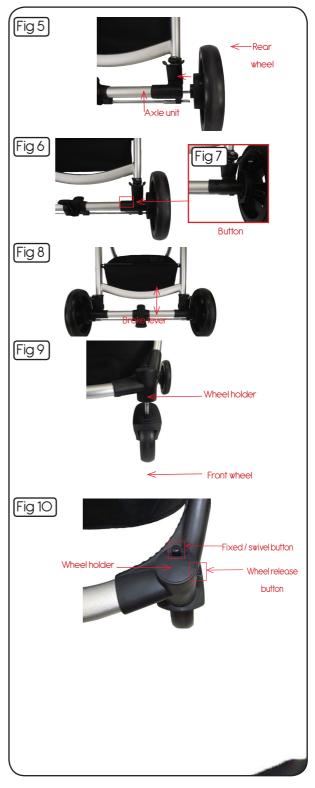

Seat unit options

Straighten the bar under the seat unit and secure in place with the Velcro tabs (Fig.11)

Seat unit mode: To use from 6 months plus (as a seat), connect clips 1 and 2 together and squeeze and push the butterfly clasp upwards whilst holding the D ring on the bottom of the strap. (Fig 12 and inset).

Carry cot mode: Undo clips 1 and 2 and then squeeze and pull the butterfly clasp downwards. This provides a flat cradle space for use as a carry cot for newborn.

To attach the bumper bar

Slot the ends of the bumper bar in to the holes in the centre of the seat/cot unit and push down until they click in place. To remove the bar, push in the buttons on each side and pull out. You can release one side of the bumper bar and swivel it around to aid you in putting your child in or taking them out of the seat unit. (Fig.13)

To attach and operate the canopy

Push the brackets on the end of the hood on to the seat/cot frame where the pin is and attach the back of the hood by connecting the zip to the back of the seat/cot unit. Simply push or pull the front bar of the hood to open or close it. (Fig.14).



<u>To attach the seat unit to the frame</u> Slot the adaptors on the seat unit to the brackets on the frame (Fig.15).

To rotate or remove seat unit

To reverse the seat unit or take it off, squeeze the triggers on both sides and lift off (Fig.16).

To attach the apron

Zip the apron onto the seat unit and wrap the end of it around the bumper bar and secure with the Velcro (Fig.17).

To adjust the calf support

Push the buttons on both sides of the seat unit and choose which position you would like the calf support (Fig.17).

To recline the seat unit

Lift the lever on the back of the seat unit to select a different position. Then raise or lower the seat to the desired height and release the lever. (Fig.18).

<u>Car seat</u>

Attach the car seat to the stroller in the same way as the seat unit by slotting the adaptors on the seat unit to the brackets on the frame. To raise or lower the handle press in the buttons and adjust the handle (Fig.19).

To fold the stroller

Remove the car seat or seat unit from the frame.

Lower the handle by sliding the primary lock button to the side and then squeeze the secondary lock trigger. (Fig.2O).

Just above the basket between the legs there is a strap(Fig.21) pull the strap upwards and this will lock the frame in a closed position.



General care:

 The correct use and maintenance of this stroller is essential.

•Do not use excessive force when folding the stroller.

•If you are having problems, fully open the stroller and repeat the folding procedure.

•Always let wheels down as gently as

possible when mounting and dismounting kerbs.

•Always fold the stroller when going up or down stairs.

•Never bump the stroller over these or similar obstacles.

 In some climates mould and mildew can affect the fabric and rain cover. To avoid this, do not fold the stroller when it is wet. Leave it open in a ventilated area until completely dry.

Always store the stroller in a dry place.

•When storing the stroller in the car, never place other items on top of it.

•Do not exceed the maximum load of 2 kgs in the shopping basket. (Where provided).

Cleaning:

•Fabric covers and trims may be spot washed using mild detergent and warm water. Leave to dry in a ventilated area away from direct sunlight.

•Avoid leaving your stroller in direct sunlight for prolonged periods of time as this may cause fabrics to fade.

Do not dry clean, machine wash or tumble dry.

Metal parts may be cleaned with a damp cloth.
Always wipe dry. Clean plastic parts with a mild

soap and water solution, wipe dry.

Maintenance:

•Maintain your stroller by lubricating all metal moving parts with a silicone based spray. Do not use heavy machine oil or grease as this can attract dirt or grit.

 Check that nothing is loose or broken and that no sharp edges have been exposed. Inspect all joints and the harness, replace any damaged parts immediately.

 Inspect any nuts and bolts regularly to ensure none have worked loose. Tighten as necessary.

• Only use replacement parts and accessories that have been approved by the manufacturer. Failure to do this may invalidate your warranty.

Safety warnings:

WARNING Never leave your child unattended. WARNING To avoid injury ensure your child is kept away when unfolding and folding this product.

 $\ensuremath{\mathsf{WARNING}}$ Do not let your child play with this product.

WARNING Always use the restraint system.

WARNING This product is not suitable for running or skoting.

WARNING Your child's safety is your responsibility. WARNING Any load attached to the handle affects the stability of the pram / pushchair.

WARNING Check that the pram body or seat unit attachment devices are correctly engaged before use.

• WARNING Use a harness as soon as your child can sit unaided.

• PRAM MODE: WARNING: This product is suitable for a child who cannot sit up by itself, roll over and cannot push itself up on its hands and knees. Maximum weight of the child: 9kg.

• Not intended for children weighing more than 15kgs. This stroller is designed for one child only.

• The brake must always be engaged when placing and removing children from the stroller.

• Any load attached to the handle and/or on the backrest and/or on the sides of the vehicle will affect the stability of the stroller.

• Lift a child in and out of the stroller. Do not allow a child to stand on the footrest or seat.

• Do not use accessories that have not been approved by the manufacturer.

•Never use the stroller to carry a child up and down stairs or escalators.

• For newborns, it is advisable to use the seat unit in the fully reclined position.

NOTE D rings have been provided for the attachment of a separate safety harness approved to BS 6684 (if required). The points for attachment are located on the waist straps of the harness.

This product complies with BS EN 1888 : 2012 For all technical queries please call: 01454 326 568

Imported by: The Red Kite Baby Co Ltd, 35 Lavenham Road, Beeches Industrial Estate, Yate, Bristol, BS37 5QX

Stroller / Travel System Important Safety Information:

• The stroller will not fold down with the car seat or seat unit attached.

•For new born babies we recommend using the stroller in Pram mode as this provides the most reclined seat back position.

 \cdot Seat unit intended for children from birth up to 15 kg. Use in pram mode for babies aged O – 6 months and in stroller mode from 6 months until 15kg.

• This product is supplied with one raincover which fits the stroller in stroller and pram mode. Place the raincover over the unit and secure with the elastic. We recommend allowing the raincover to dry before folding and storing in the basket to prevent mould and mildew forming. A raincover is not supplied for the car seat.

•Padded liners are supplied with the seat unit and car seat. These can be removed by threading the harness through the slots in the liner.

•The fixed wheel function makes using the stroller on uneven terrain easier. However, the stroller must never be used on sand as this will severely damage the bearings in the wheels.

•The height of the shoulder straps can be adjusted by feeding the harness through the cut out holes located on the seat unit.

 \cdot WARNING! For babies aged O – 6 months the harness must be fed through the retaining holes to prevent risk of strangulation.

•Never use the detached seat unit (in pram mode) as a carry cot.

•Never change the seat unit into pram mode with your child in the seat unit.

- WARNING! When in pram mode, do not use an additional mattress.
- •Take extra care in windy conditions.
- •Before folding the stroller check the following:

A Your child is clear of moving parts

B The rear brakes have been applied

C The front wheels are secured in the locked mode

D The seat unit or car seat has been removed

E All items have been removed from the basket

F Never attempt to close or fold the stroller with the child inside