


kiddicare

trekker pushchair

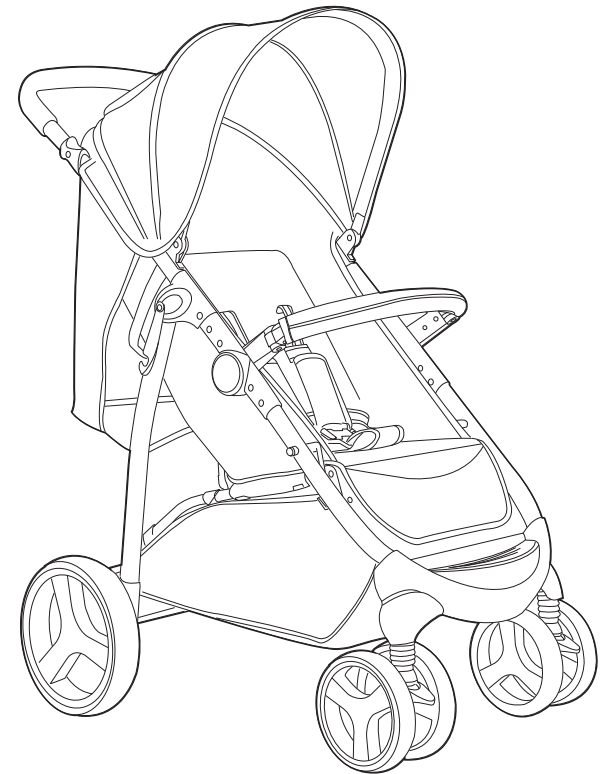

IMPORTANT:
KEEP FOR FUTURE REFERENCE, READ CAREFULLY


safety

WARNING !

- This product complies with EN 1888:2012 safety requirements
- Your child's safety is your responsibility.
- Never leave your child unattended.
- Ensure that all the locking devices are engaged before use.
- To avoid injury ensure that your child is kept away when unfolding and fold this product.
- Do not let your child play with this product.
- Always use the restraint system.
- Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- This product is not suitable for running or skating or any other sport activities
- Any load attached to the handle, backrest or sides affects the stability of the pram/pushchair.
- Only use accessories sold or approved by the manufacturer.
- Only use spare parts sold or approved by the manufacturer.
- The brake must always be on when putting the child in or taking him out.
- Never carry more than 1 child per place in the pushchair at a time.
- This pushchair is intended for children from birth, up to 15 kg.
- For buggies with accessories (depending on the version), please respect the maximum weight loads indicated below: basket 2 kg.
- Always use the most reclined position when used for new born babies.



part list

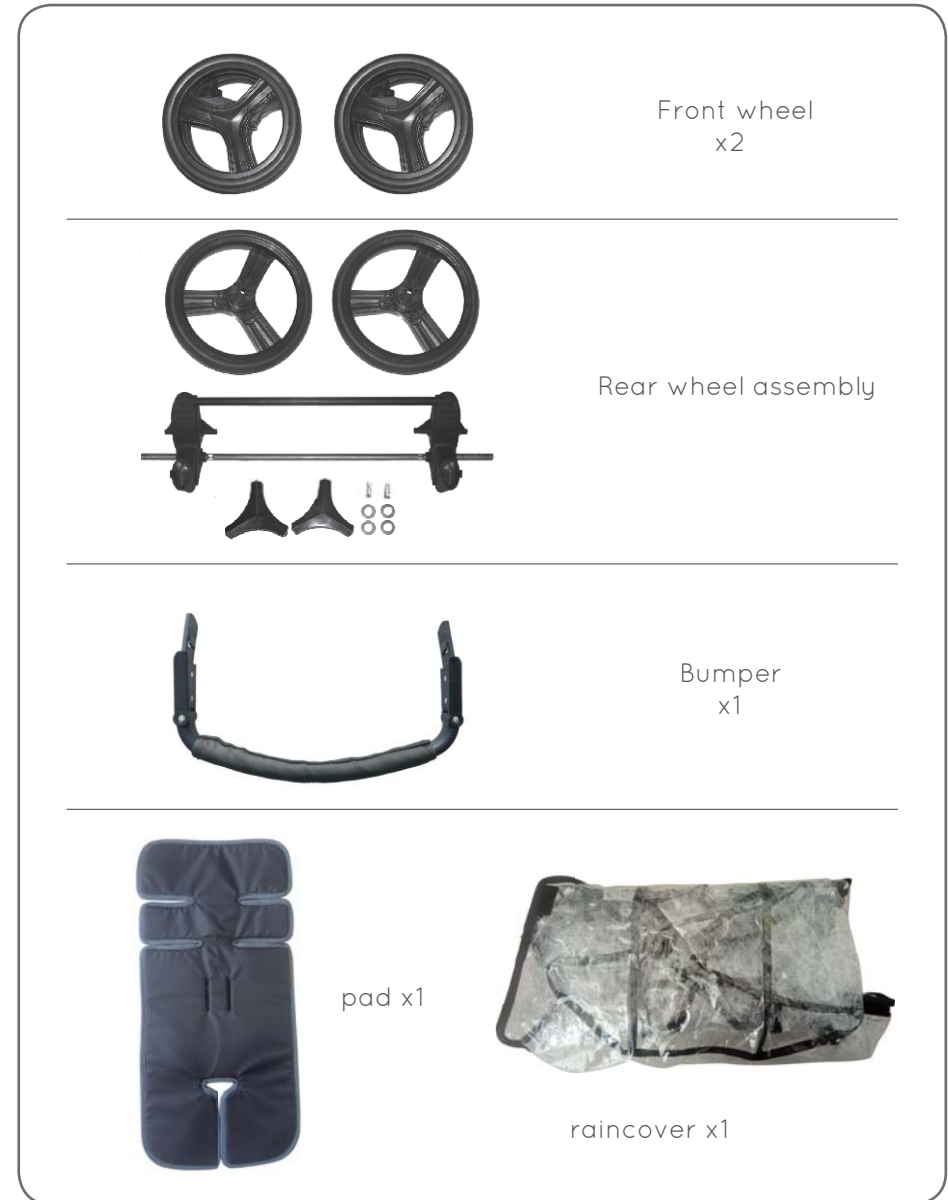

assembly

Unfold frame (pic.1)

Release the folding lock, then open the frame and take out the tray and the rear wheel assembly. Open frame fully until a 'click' sound is heard



1

Assemble the front wheel (pic.2)

Press down the lock pin on the front tube, then insert the front tube into the adaptor of the front wheel, until the lock pin is positioned in the plastic hole.
To disassemble : Press down the lock pin and pull the wheel set out.



2

Assemble rear wheels (pic.3)

Insert rear tube into the rear wheel plastic housing until you hear a 'click'.

To disassemble : Press down the lock pin as pictured and pull the rear wheels out.

WARNING : Ensure the lock pin has been fully locked in the plastic housing.




3

Insert each end of the bumper into the adaptor into each side of the hinge, until you hear a 'click'.




4a

To disassemble : Press down the release button on each side (pic.4b), then pull off the bumper.

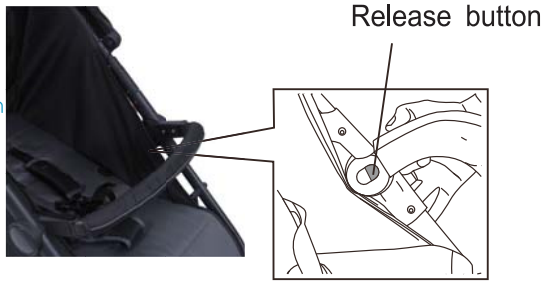

Use the front swivel lock


Press down the swivel lock lever and fix it into the base notch. To release, pull the lever upwards.

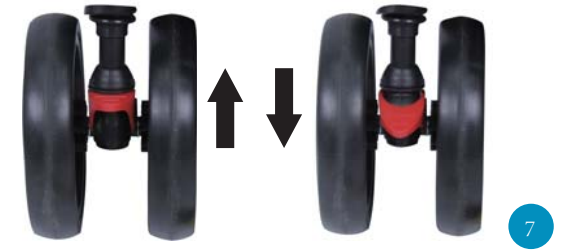

in use

Using the safety harness (pic.5)


WARNING : Please ensure the safety harness is always used, ensuring the child's back is secure against the back of the seat. Ensure the harness fits your child securely. If necessary, alter the length of the shoulder, waist, or crotch straps using the adjusters provided.

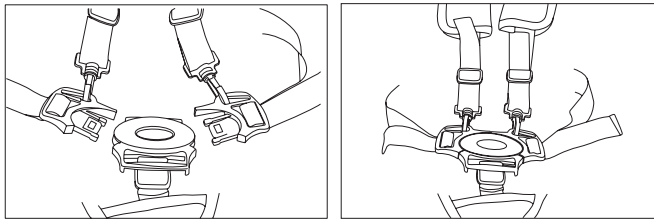

Insertion

Adjust the backrest (pic.6)

With one hand, hold the end of the webbing strap. With the other, pinch the adjusting buckle and pull strap to move the backrest to the desired position.

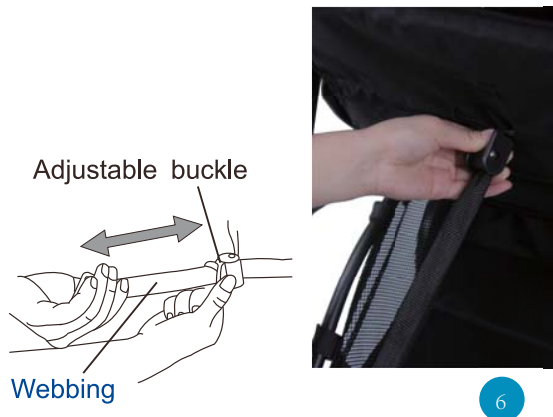

Link brake bar operation (pic.8)

To engage the brakes, simply press down the link brake bar located on the rear wheels with your foot. To release the brakes, simply lift the link brake bar located on the rear wheels. **WARNING :** Please always apply parking brake when you stop moving.



Adjust canopy (pic.9)

Pull the canopy forward or backward to the desired position.



Adjust leg rest (pic.10a)

Press the trigger on each side of the leg rest to release, then move to the desired position. Release trigger to click into place.



Adjustable trigger

10a




Leg rest

10b

after use

WARNING ! Please adjust the backrest to the flat position before folding the pushchair (pic.11a)

Firstly, ensure the canopy is closed and the shopping basket is empty. Secondly, use your forefingers to pull the folding locks on both sides of the pushchair to release the folding mechanism. To fold, press the handle downwards. Once folded, ensure the folding lock is engaged.

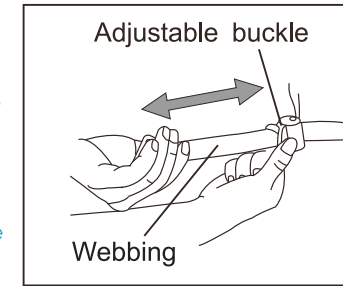

11a

Folding Lock



11b

Folding Lock



11c

installation of infant car seat on stroller

(infant seat and adaptors can be sold separately from the stroller)



First remove the bumper if necessary. Place the back of the pushchair in the horizontal position. Assemble the two car seat adaptors onto the pushchair, then place the car seat facing the mother and secure the car seat by clicking onto the adaptors. Make sure there is an audible 'click' to indicate the car seat is locked securely onto the adaptors.

Removal : press the red buttons on the adaptors, then remove the car seat from the pushchair.

WARNING : The car seat cannot replace a cushion or a bed. Remove the child to an appropriate carrier or bed to sleep. Not suitable for over night sleeping, your child may be at risk of serious harm or injury.

care

Maintenance

This product requires regular maintenance to keep it in good working order.

Keep moving parts clean and well lubricated.

Regularly check all parts of the product to ensure that they are operating correctly and for signs of wear or damage.

Do not use this product if any part is broken, torn or missing.

Only replacement parts supplied or recommended by Kiddicare should be used. Contact Kiddicare using the details given below.

Care

The seat may be cleaned by sponging lightly using warm water and a mild detergent. Dry thoroughly before storing.

Sponge clean metal or plastic components with mild detergent and warm water.

Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.

After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form. Store in a dry safe place.

Do not leave in sunlight for prolonged periods - some fabrics may fade.