


Kiddicare

IMPORTANT—RETAIN FOR FUTURE REFERENCE, PLEASE READ CAREFULLY

MK2Cot Top Changer

EASY ASSEMBLY INSTRUCTIONS

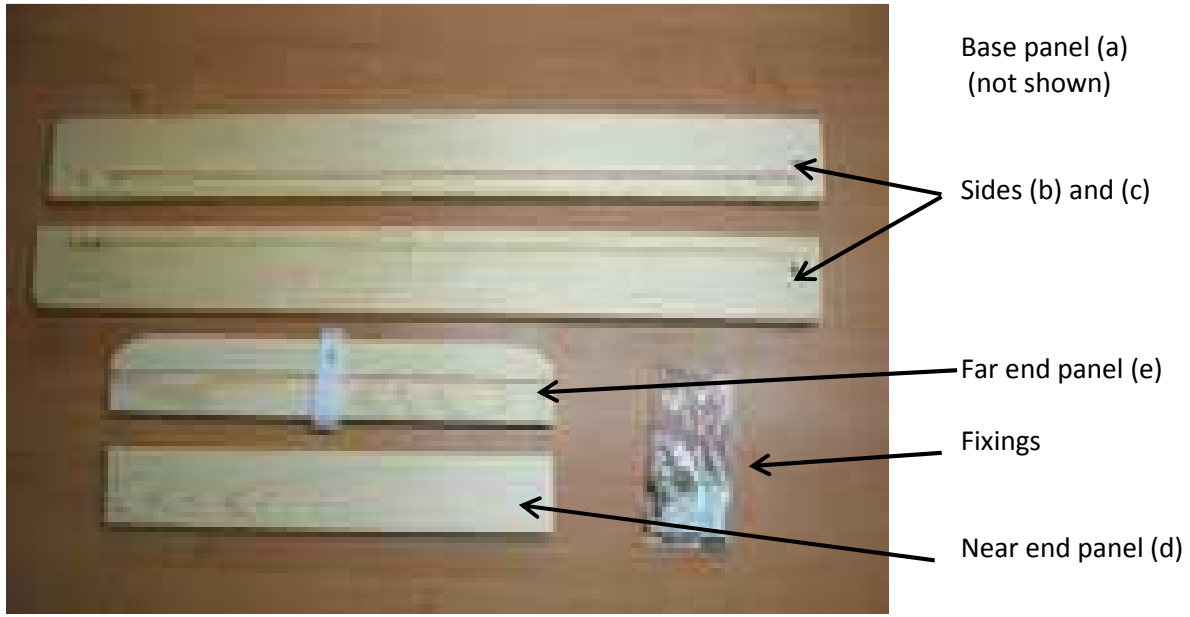


Fixings contents:

1. White strap x 1
2. Small screw x 1
3. Washer x 1
4. Sachet of glue x 1
5. Large wood dowels x 2
6. Small wood dowels x 2
7. Very Small wood dowels x 2
8. Furniture screws x 4
9. Allen Key x 1a

Note: The strap, washer and small screw are shown attached to Far end panel (e) above.

Tools required for assembly:

Allen key (provided), Cross head screw driver (not provided), hammer (not provided).

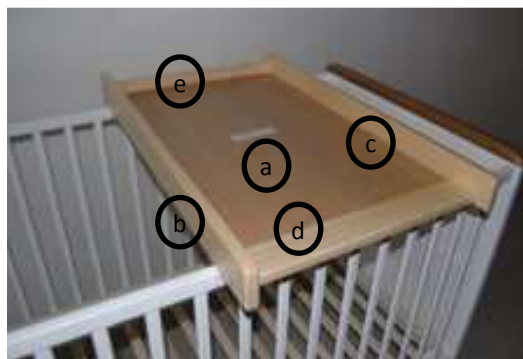

ASSEMBLY INSTRUCTIONS

Process 1

Insert glue in dowel holes on parts b and c (Sides) and insert the 2 small and 2 very small dowels and gently tap down with a hammer.

Process 2

Glue dowel holes in the Near end panel (d) and the Far end panel (e). Insert dowel holes onto one of the sides (b or c). It is **IMPORTANT** to ensure that the grooves on the panels are facing inwards and the screw holes and grooves are all aligned.

Insert a furniture screw in one end of the side and screw in the near and far end panels using the Allen key provided, repeat this for the other end of the side. Do not tighten screws.

Process 3

Insert Base panel (a) into the groove of parts b and d. Make sure the Base panel is correctly in the groove and that it slides into the groove on the side. Please make sure that the sticker is face up.

Process 4

Place the remaining side (b or c) over the part assembled changer and insert the dowels in the side (b or c) into the glued dowel holes in the end panels ensuring that the screw holes are aligned. Gently tap down with a hammer.

Insert a furniture screw in one end of the side and screw in the near and far end panels using the Allen key provided, ensure that the edges of the base panel (a) have inserted into the grooves on all 4 sides of the changer. Repeat this for the other end of the side.

Now tighten all 4 furniture screws, being careful not to over tighten.

Process 5

Insert some of the glue into the dowel holes on the underside of the changer and insert the big dowels, then lightly tap down. The dowels should be protruding approximately 1cm.

Process 6

Insert small screw into the washer and push through the fabric of the strap, then screw into the small pilot hole on the underside of end (e). Fasten the strap around cot side to prevent the cot top changer from moving.

INSTRUCTIONS FOR USE

The Cot Top Changer is only suitable for babies up to 12 months (approximately 9 Kg).

Secure the Cot top changer to the cot using the Velcro fastener. Check that the changer is securely attached to the cot. A changing pad is not supplied with the changer. If required, a foam filled changing pad of length not more than 71cm and width of not more than 44cm and maximum thickness not more than 4cm is suitable.

WARNING: To avoid the risk of falls from the cot top changer:



ALWAYS keep the baby within arm's reach when on the changer.

As your baby grows he/she will surprise you by what he/she is capable of. ALWAYS be vigilant.

REMEMBER: the baby's safety is YOUR responsibility.

Remove changer from the cot when not in use. NEVER place a child in the cot when the changer is fitted to it.

Do not place the Changer near heat sources. Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires, etc. in the vicinity of the cot.

Do not use the Changer if any part is damaged, broken torn or missing. Use only spare or replacement parts approved by the manufacturer. The Changer may be cleaned by wiping with a damp cloth and drying with a soft clean cloth.

EN 12221-1:2008

Kiddicare PE7 8JA : Helpline: (01952 461148)