

Safety

Warning: Do not leave your child unattended.

Always use the wall attachment strap provided

All assembly fixings should always be tightened properly. Care should be taken that no screws are loose because a child could trap parts of their body, or clothing (e.g. strings, necklaces, ribbons, dummies, etc.) which could pose a risk of strangulation.

Be aware of the risks of open fires and other such sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the dresser.

Suitable for use with a changing mat of max size 71x 40,6cm

The changing area is suitable for use up to 12 months old or 11kg in weight.

Do not use the dresser if any of the parts are broken, torn or missing.

Any additional or replacement parts can only be obtained from the manufacturer or the distributor.

This product conforms to: BSEN 12221:2008 +A1:2013.

Maintenance

Take care when handling or moving the furniture. Careless handling may cause damage.

Regularly check that all fixings are tightened and that there are no broken or damaged parts.


Cleaning

Your dresser can be cleaned by wiping with a damp cloth and drying with a soft clean cloth.

Do not use abrasives, bleach, alcohol or ammonia based household polishes.


Somerset

Changer

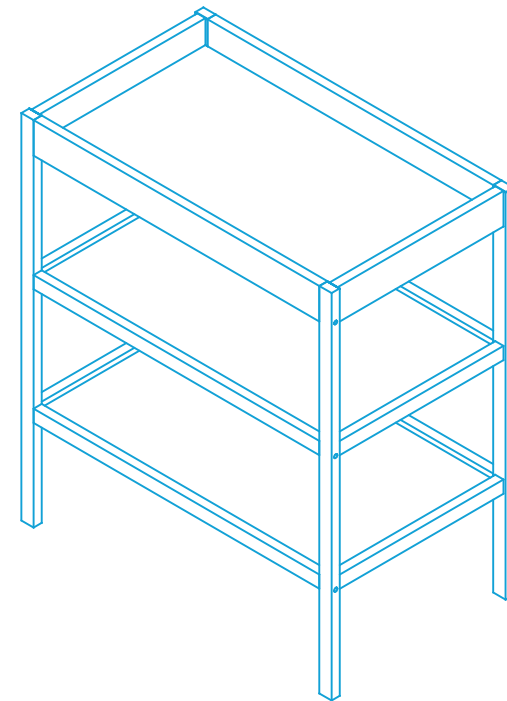


IMPORTANT:
KEEP FOR FUTURE REFERENCE,
READ CAREFULLY


parts

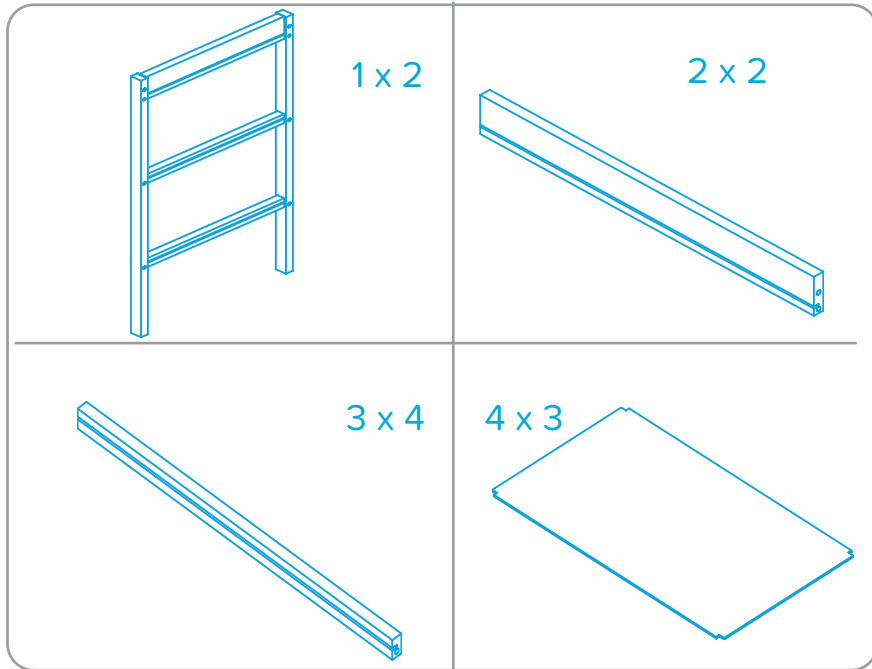


fittings

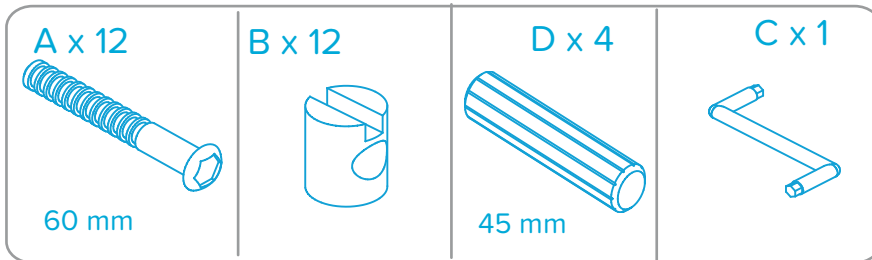

assembly

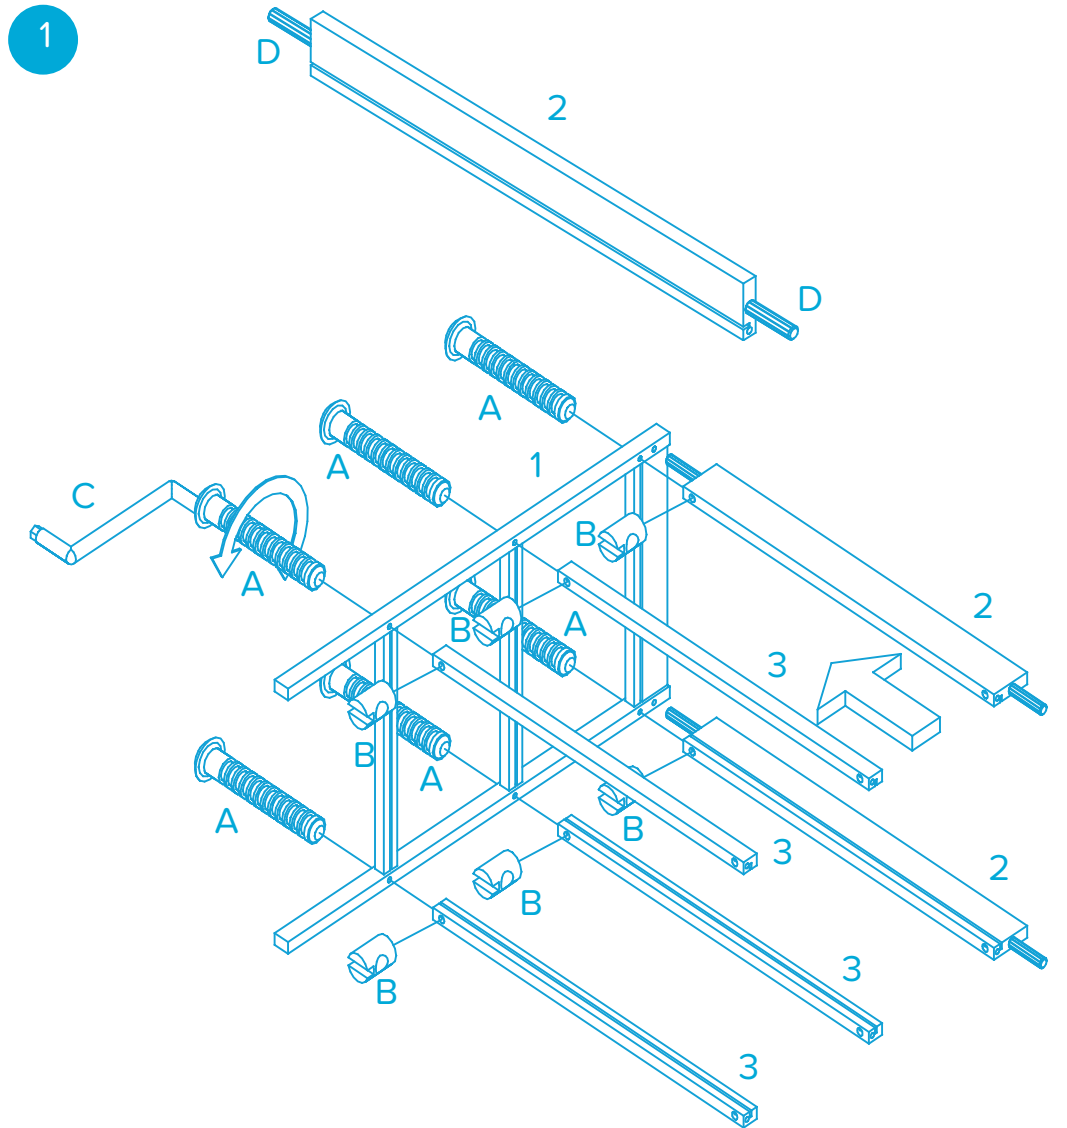


Measure

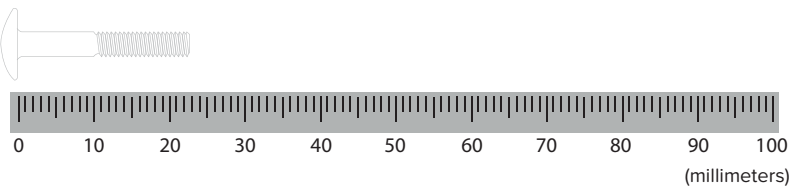

assembly


2

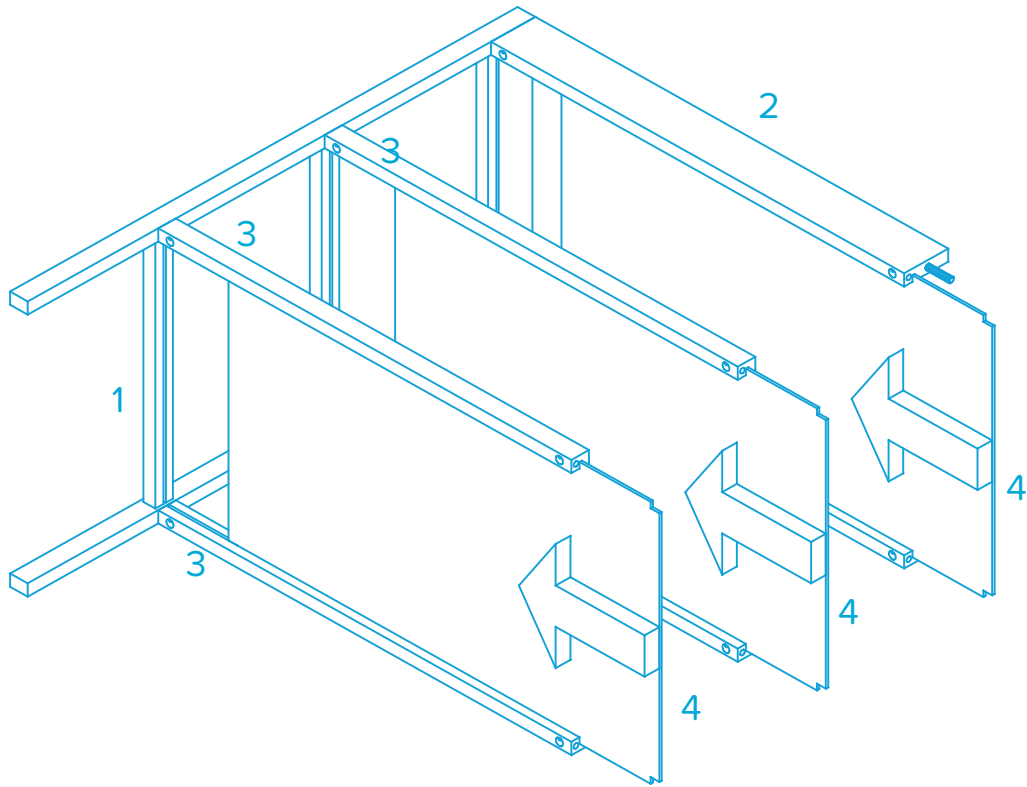

4

assembly

3

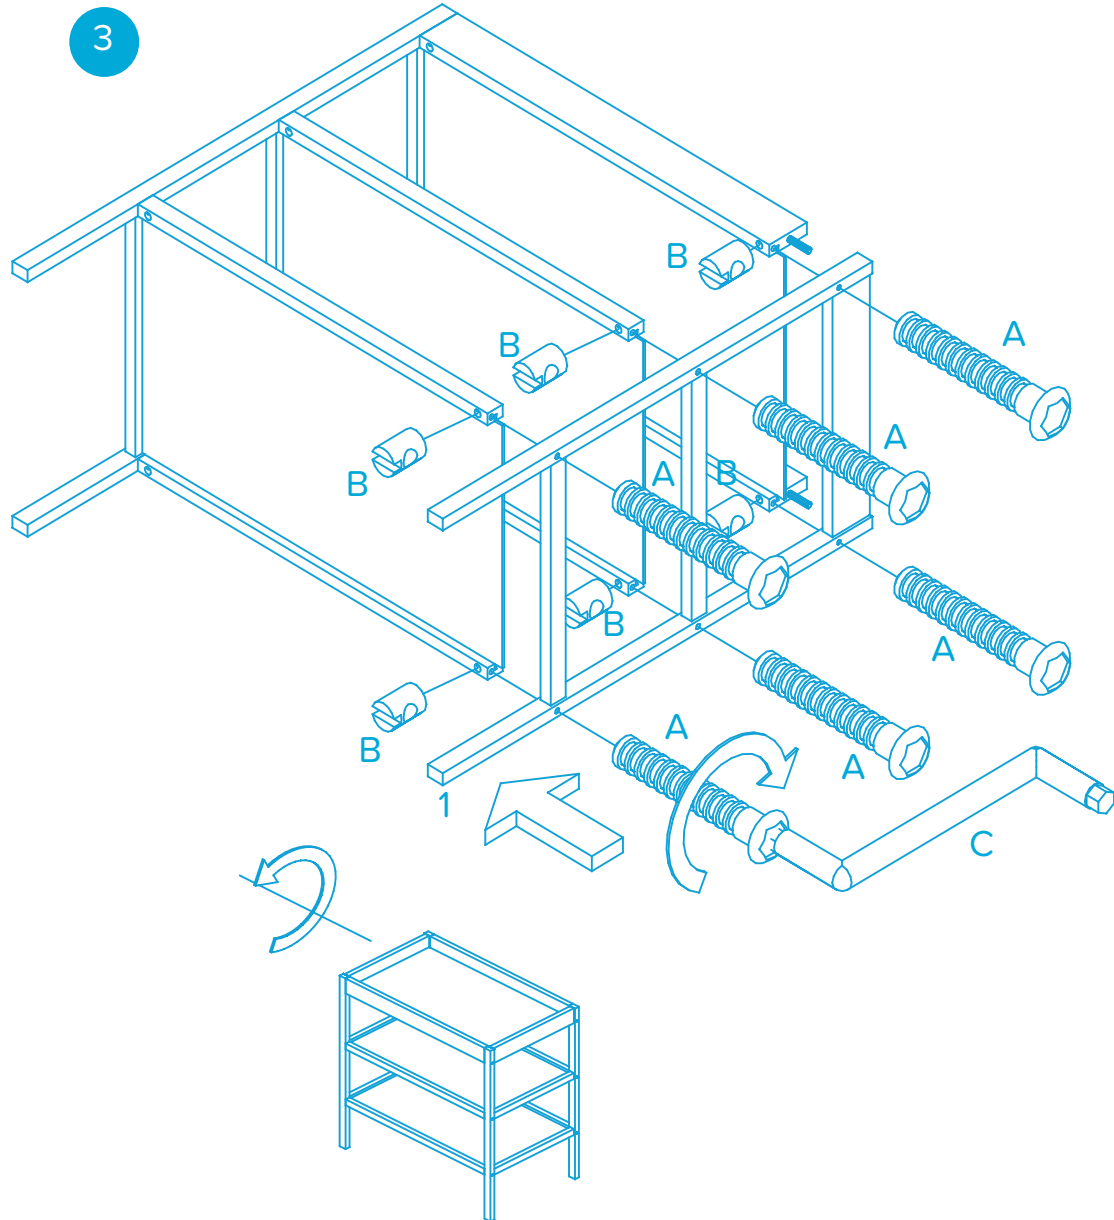

5