



VICTORIA NATURAL BEDSTEAD

CLASSIC FRENCH INSPIRED BUTTONED BEDSTEAD WITH ORNATE SCROLL DETAILING

Double Size: H1185 x W1490 x L2410cm · LIMITED ASSEMBLY

King Size : H1185 x W1640 x L2490cm · LIMITED ASSEMBLY

Dear Customer

Thank you for purchasing your new piece of Dorma furniture.

At Dorma we are incredibly proud of our British design heritage and our reputation for producing beautiful homewares of the ultimate quality since 1921. So it is no surprise that we still set our standards above the industry benchmark for quality and design. Our unique blend of heritage and innovation harmoniously blends traditional luxury with modern materials to create quality that delivers the comfort, ease and longevity you demand for your modern lifestyle.

Exceptional design with quality at its core has always been the hallmark of Dorma and is why, once you have become acquainted with the Dorma brand, you will refuse to accept imitations. We put a lot of effort into the design and construction of our products to ensure that they set the standard for quality, durability and ease of assembly.

If for any reason you feel we haven't lived up to the high standards we set ourselves, please don't hesitate in contacting us on 0845 165 65 65 where our team will be very keen to understand what has gone wrong and, more importantly, put it right.

There is no need to feel daunted by the number of parts and fittings in front of you, we have compiled this straightforward, step-by-step guide to make sure that assembling your furniture is as easy as 1, 2, 3.

Before you begin, we advise that you check that you have everything you need to get started.

The full list of furniture parts, fixtures & fittings, as well as the tools you will need for assembly, can be found on the reverse of this manual.

TOP TIP

Find a space to spread these out across the floor before you begin assembling them. Lay each panel down in position, ready to build. Identify all of the fittings, make sure that you have them all prepared and familiarise yourself with each component, to make things easier when you are putting it all together.

Safety and Care Advice

IMPORTANT - The first step you need to take is to ensure your safety!

Please take time to read and understand these instructions before assembling your furniture.

Keep children and animals away from the assembly area.
This furniture contains small parts that could cause choking if swallowed.


Keep all plastic wrapping materials away from children to avoid danger of suffocation.
Ensure that all packaging material is disposed of carefully and responsibly.
Make sure that you allow enough space to move around when assembling your furniture.

We hope you enjoy your furniture for many years to come and thank you again for your purchase.

dorma.co.uk


Parts & Fittings

Headboard

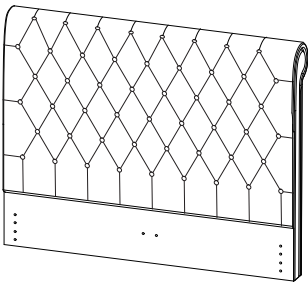


A 1 piece

Footboard

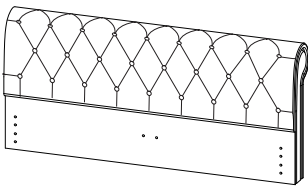


B 1 piece

Side Panels

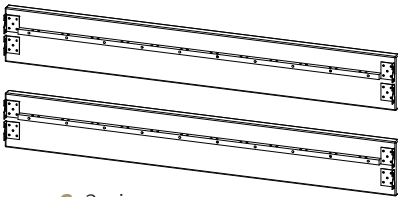


C 2 pieces

Legs




D 4 pieces

Centre Support Bar




E 1 piece

Centre Support Leg




F 2 pieces

Single Plastic Cap




G Double: 24 pieces
King: 26 pieces

Double Plastic Cap




H Double: 12 pieces
King: 13 pieces

Wooden Slats




J Double: 24 pieces
King: 26 pieces

M8x30mm Bolt




K 20 pieces

Spanner for Nuts




L 1 piece

M8x40mm Bolt




M 4 pieces

Sprung Washer




N 16 pieces

Flat Washer




P 24 pieces

Allen Key



Q 1 piece

Nuts




R 4 pieces


Tools required - some tools supplied - see parts list

1

Fix legs (D) in the marked positions on underside of headboard (A) and footboard (B)

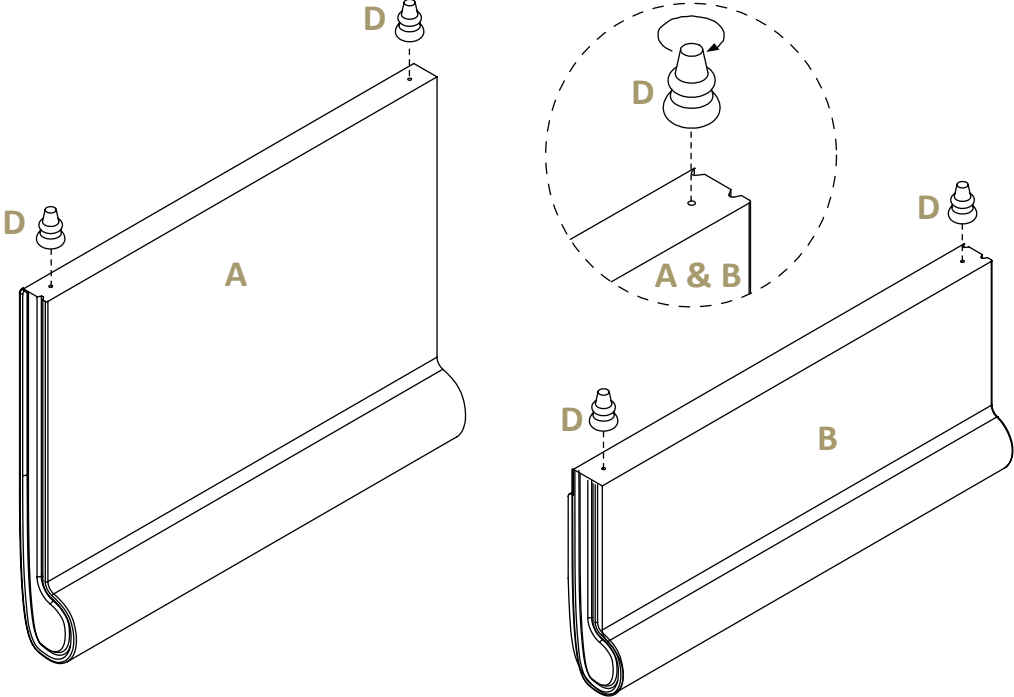

2



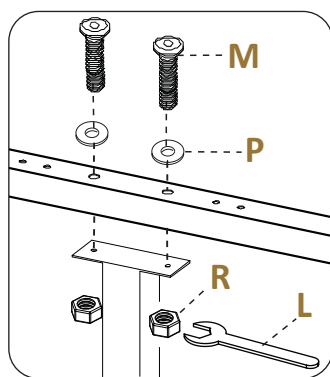


Fit support legs to centre support bar (E) using bolts (M), flat washer (P) and nuts (R); fully tighten using Allen Key (Q) and spanner (L).

3



Loosely insert 8 bolts (K) with sprung washer (N) and flat washer (P) into each side of head and footboard (A&B).
Note: Do not fully locate the bolts but leave 10mm protruding.

Fit the side panels (C) locating the brackets behind the flat washers.
Once all four corners are located, make sure the bed is square but don't tighten any bolts yet.

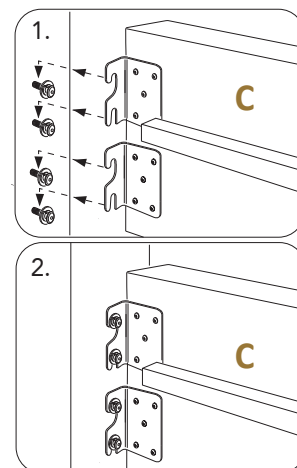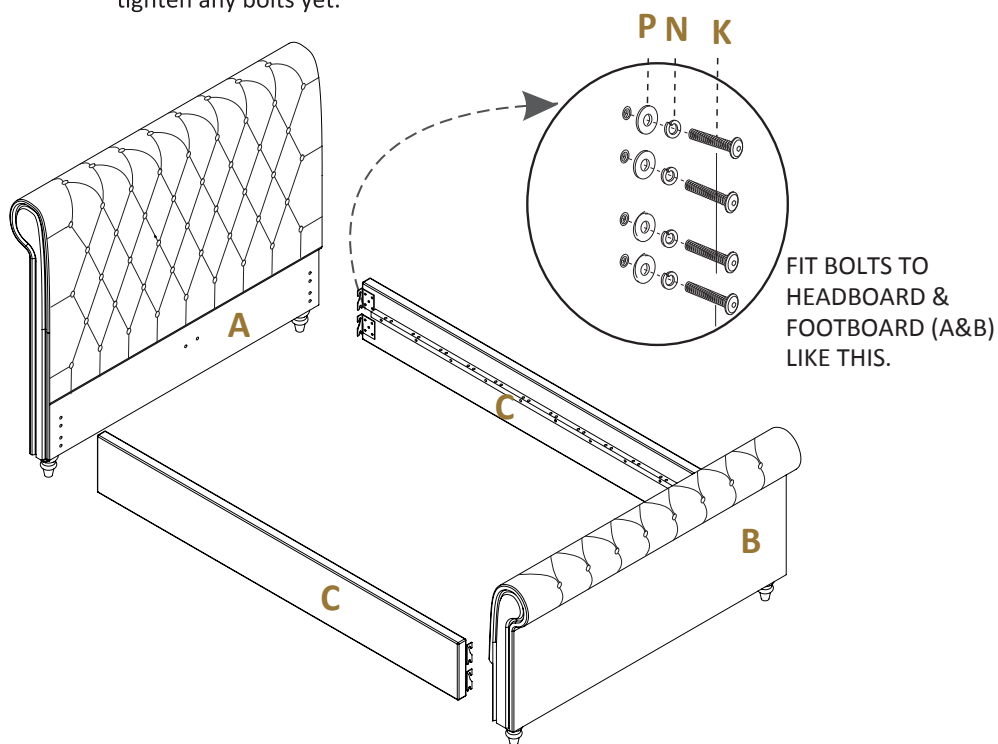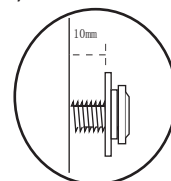


4

Fit bolts (K) and flat washers (P) carefully fixing centre support bar to headboard & footboard respectively (take care not to damage the fabric)

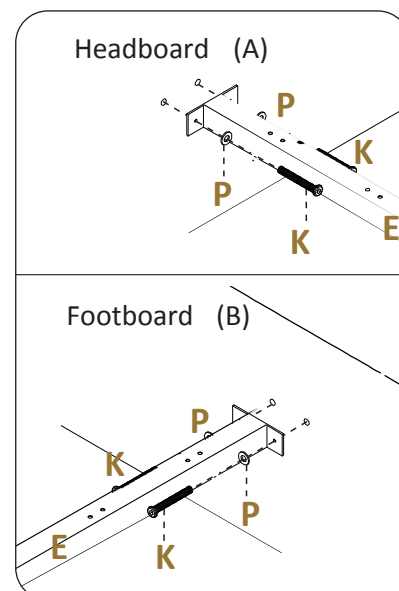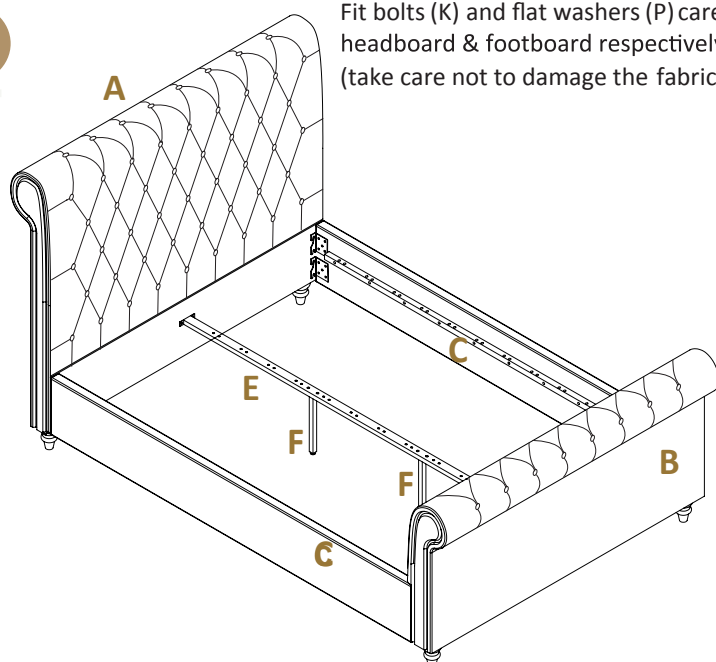

When all bolts are screwed in place, tighten them 100%. Carefully adjust the feet (F) so support bar is level.

5

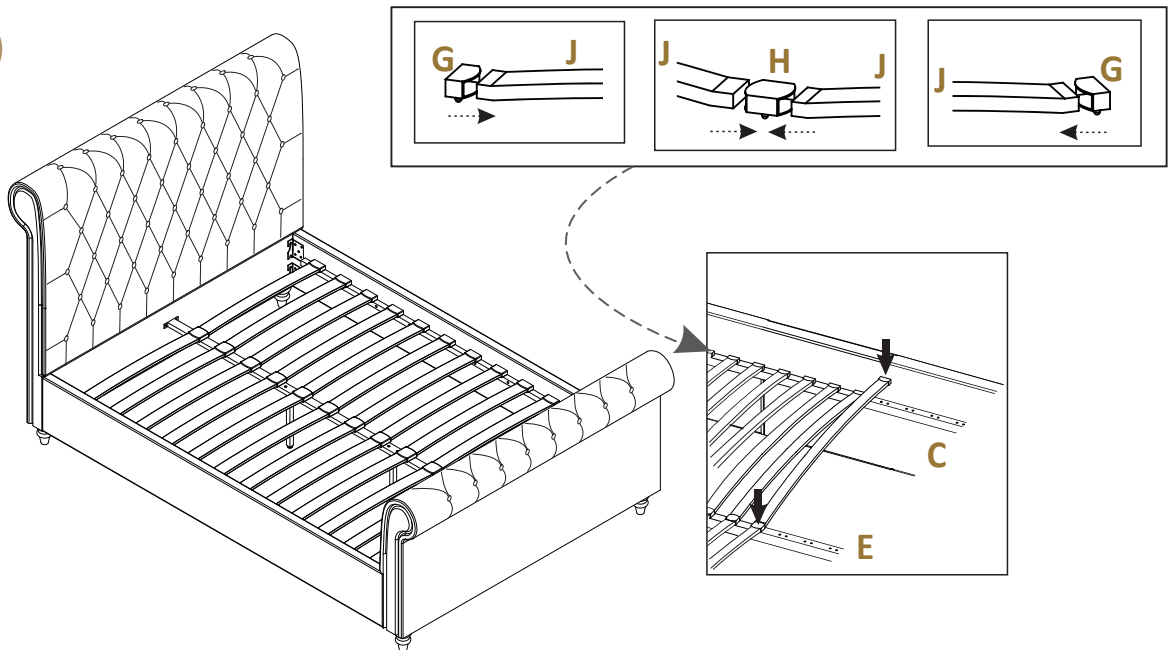

Fix slat (J) to double plastic cap (H). Fix single plastic caps (G) onto each end then connect onto centre support bar (E) & metal support rails of side panels (C) by gently pushing into the side and centre rails.