

kiddicare

anna







dropside cot



IMPORTANT: KEEP FOR FUTURE
REFERENCE. READ CAREFULLY

Instruction Manual

parts
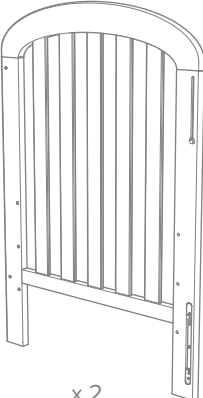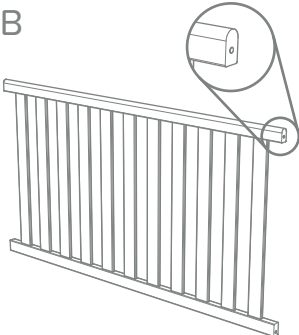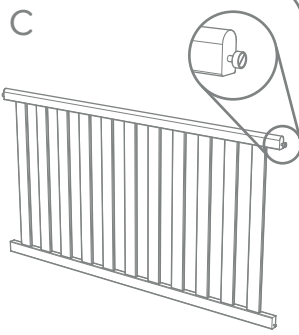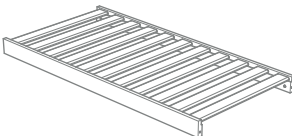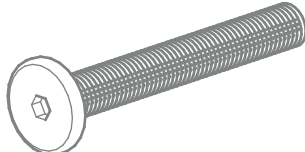
<p>A</p>  <p>x 2 (L & R)</p>	<p>B</p>  <p>x 1</p>	<p>C</p>  <p>x 1</p>
<p>D</p>  <p>x 1</p>	<p>E</p>  <p>65mm x 8</p>	<p>F</p>  <p>x 8</p>

Tools required

not included




flat-bladed screwdriver



included



hexagon key

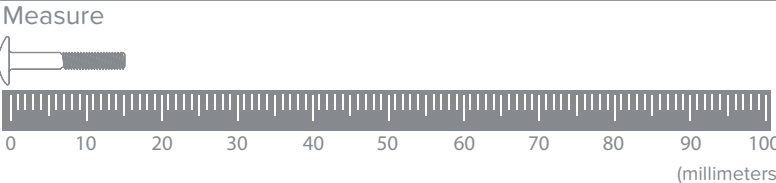


assembly

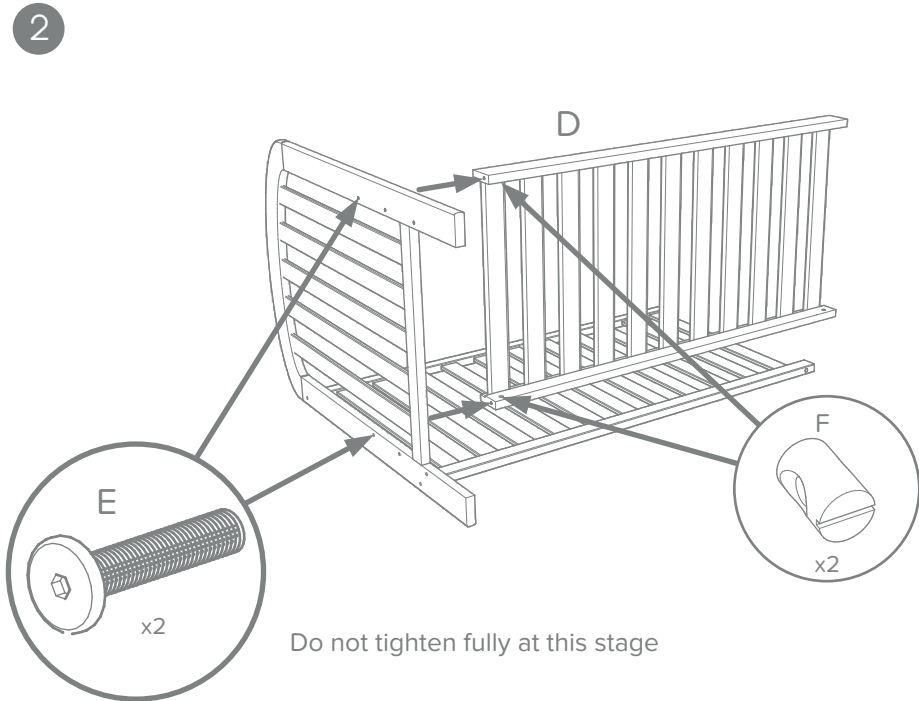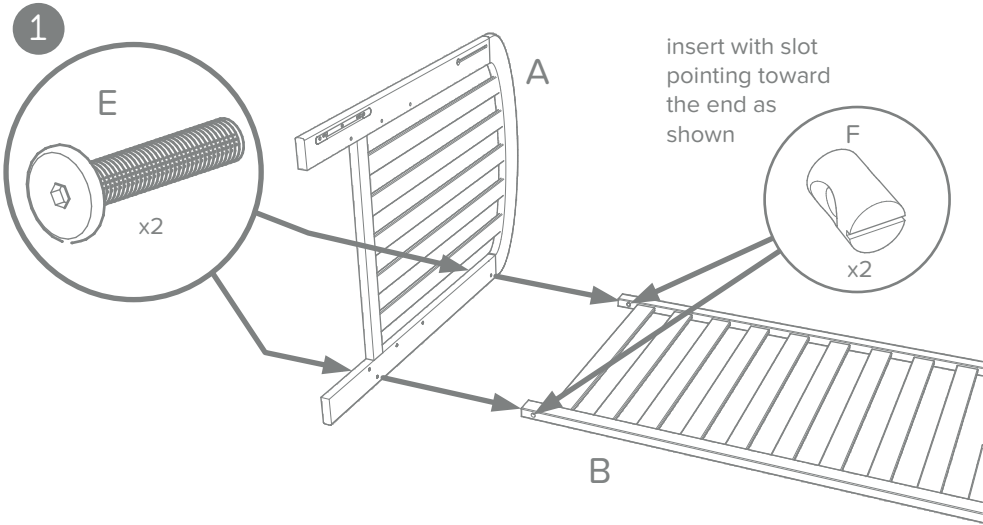

assembly

3

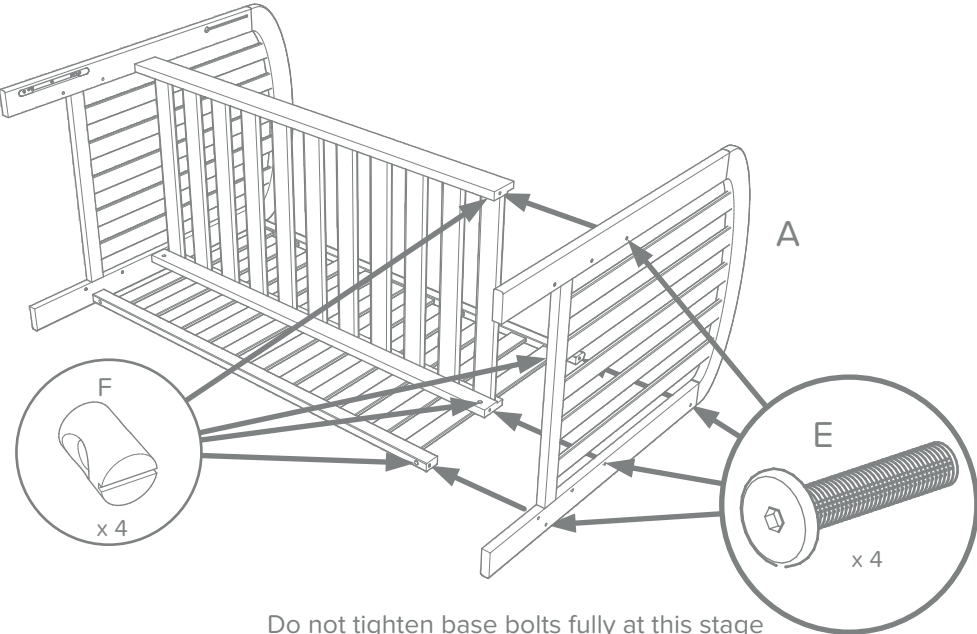


assembly

4


IMPORTANT:

At the top of the dropside the plastic caps should be fitted over the bolt head. If not, pull forward to clip into place.

- 1) Ensuring that the plastic caps remain in place over the metal bolt heads, ease the cot ends apart and locate them in the holes in each end panel as shown.
- 2) Raise the dropside frame to align the lower end pins with the lower grooves.

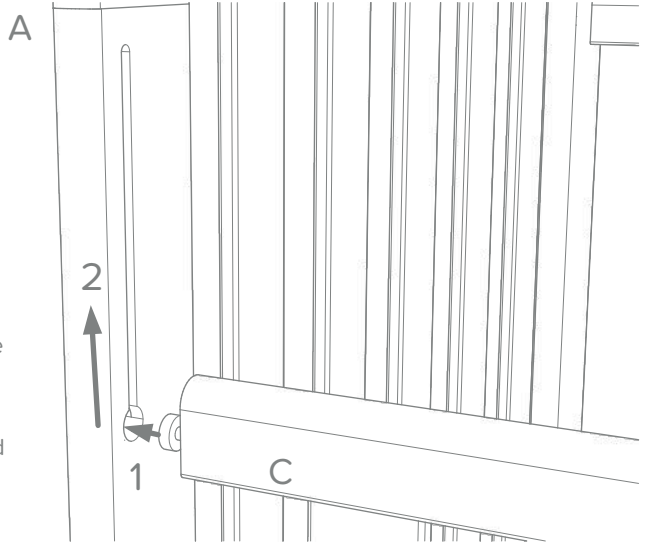

- 3) Push the lower pins in against the spring pressure and locate them in the slots. The help of an assistant will make this stage easier. Push all parts tightly together and fully tighten all bolts. Your cot is now ready for use.
- NOTE: Take care when locating pins into lower grooves as the pin can easily damage the surface finish.

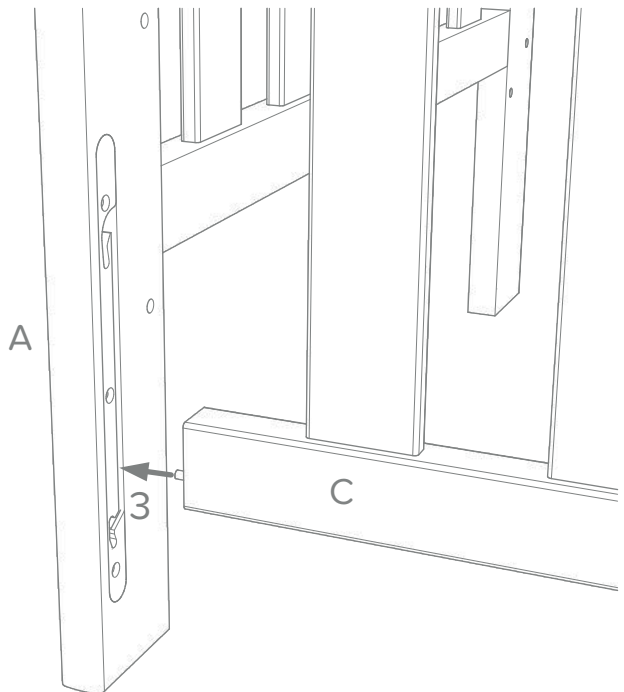



To operate the Dropside;

Grasp the top rail in the centre and lift slightly (1).

Press the bottom of the dropside in with your leg (2) - this will disengage the locks and allow the side to drop.

Lower the side (3)

To raise the side, lift the dropside slightly, push the bottom rail inward with your leg then lift again until the dropside clicks into place.

IMPORTANT:

Always grasp the top rail in the centre to ensure that both locks engage and disengage.

safety

Warning: Do not use the cot if any part is broken, torn or missing and use only spare parts approved by the manufacturer.

Warning: Do not leave anything in the cot or place the cot close to another product, which could provide a foothold or present a danger of suffocation or strangulation, e.g. strings, blind/curtain cords, etc.

Warning: Do not use more than one mattress in the cot.

Warning: Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires, etc. near the vicinity of the cot.

- ⚠ If you leave the child unattended in the cot, always make sure that the dropside is in the raised position.
- ⚠ The base can be adjusted in height, but the lowest position is the safest and should always be used in that position as soon as the baby is old enough to sit up.
- ⚠ This product is suitable for a mattress of 1200mm in length and 600mm in width.
- ⚠ The length and width of the mattress shall be no less to ensure the gap between the mattress and the sides and ends does not exceed 30mm.
- ⚠ The thickness of the mattress shall be such that the internal height (surface of the mattress to the upper edge of the cot frame) is at least 500mm in the lowest position of the cot base and at least 200mm in the highest position of the cot base.
- ⚠ To prevent injury from falls the cot should no longer be used for the child once they are able to climb out of the cot.
- ⚠ This product conforms to: BS EN 716-1: 2008 + A1: 2013

maintenance

All assembly fittings should be tightened properly and should be checked regularly and re-tightened as necessary.

A light application of a wax polish to the dropside grooves in the end panels will aid operation.

cleaning

Your cot can be cleaned by wiping with a damp cloth and drying with a soft clean cloth. Do not use abrasives, bleach, alcohol or ammonia based household polishes.

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

kiddicare

Kiddicare
Club Way
Cygnet Park
Hampton
Peterborough
Cambridgeshire PE7 8JA

kiddicare

Customer Care: hello@kiddicare.com

05/15